

paired-group

Syntax	<code>paired-group group-name;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure load sharing between two working-protect circuit pairs.
Options	<i>group-name</i> —Circuit's group name, as configured with the <code>protect-circuit</code> or <code>working-circuit</code> statement.
Usage Guidelines	See Configuring SONET/SDH Physical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<code>working-circuit</code>

