

pap

Syntax pap {
 access-profile *name*;
 default-pap-password *password*;
 local-name *name*;
 local-password *password*;
 [[Unresolved xref](#)];
 }

Hierarchy Level [edit interfaces *interface-name* ppp-options],
 [edit interfaces *interface-name* unit *logical-unit-number* ppp-options],
 [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*
 ppp-options]

Release Information Statement introduced in JUNOS Release 8.3.

Description Configure the Password Authentication Protocol (PAP). Use PAP authentication as a means to provide a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment.

After the link is established, an ID and password pair is repeatedly sent by the peer to the authenticator until authentication is acknowledged or the connection is terminated.

The statements are explained separately.

Usage Guidelines See Configuring the PPP Challenge Handshake Authentication Protocol, Configuring PPP PAP Authentication, and Tracing Operations of the pppd Process.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Topics [\[Unresolved xref\]](#), *JUNOS System Basics Configuration Guide*

