

## passive-monitor-mode

---

<b>Syntax</b>	passive-monitor-mode;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	<p>For ATM, Ethernet, and SONET/SDH interfaces only, monitor packet flows from another routing platform. If you include this statement in the configuration, the interface does not send keepalives or alarms, and does not participate actively on the network.</p> <p>For ATM and Ethernet interfaces, you can include this statement on the physical interface only.</p> <p>For SONET/SDH interfaces, you can include this statement on the logical interface only.</p>
<b>Usage Guidelines</b>	See Enabling Passive Monitoring on ATM Interfaces, <a href="#">[Unresolved xref]</a> , and Enabling Passive Monitoring on SONET/SDH Interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	multiservice-options, <i>JUNOS Services Interfaces Configuration Guide</i>

