

password

Syntax	<code>password <i>password-string</i>;</code>
Hierarchy Level	<code>[edit forwarding-options dhcp-relay authentication],</code> <code>[edit forwarding-options dhcp-relay group <i>group-name</i> authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i></code> <code>authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i></code> <code>forwarding-options dhcp-relay authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i></code> <code>forwarding-options dhcp-relay group <i>group-name</i> authentication],</code> <code>[edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay</code> <code>authentication],</code> <code>[edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group</code> <code><i>group-name</i> authentication]</code>
Release Information	Statement introduced in JUNOS Release 9.1.
Description	Configure the password that is sent to the external AAA authentication server for subscriber authentication.
Options	<i>password-string</i> —Authentication password.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	■ Using External AAA Authentication Services with DHCP

