

plp-to-clp

Syntax	plp-to-clp;
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options], [edit interfaces <i>at-fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>at-fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For ATM2 IQ interfaces only, enable the PLP setting to be copied to the cell-loss priority (CLP) bit.
Default	If you omit this statement, the JUNOS software does not copy the PLP setting to the CLP bit.
Usage Guidelines	See Configuring ATM2 IQ VC Tunnel CoS Components.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

