

## pool

---

<b>Syntax</b>	<code>pool pool-name &lt;[Unresolved xref] priority&gt;;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim/0/port</i> dialer-options], [edit interfaces <i>umd0</i> dialer-options], [edit interfaces <i>dln</i> unit <i>logical-unit-number</i> dialer-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>dln</i> unit <i>logical-unit-number</i> dialer-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	(J-series Services Routers) for logical and physical ISDN interfaces, specify the dial pool. The dial pool allows logical (dialer) and physical ( <i>br-pim/0/port</i> ) interfaces to be bound together dynamically on a per-call basis. On a dialer interface, <b>pool</b> directs the dialer interface which dial pool to use. On <i>br-pim/0/port</i> interface, <b>pool</b> defines the pool to which the interface belongs.
<b>Options</b>	<i>pool-name</i> —Pool identifier.  [Unresolved xref] <i>priority</i> —(Physical <i>br-pim/0/port</i> interfaces only) Specify a priority value of 0 (lowest) to 255 (highest) for the interface within the pool.
<b>Usage Guidelines</b>	See Configuring ISDN Physical Interface Properties and Specifying a USB Modem Interface on J-series Routers.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

