

## preprovisioned

---

<b>Syntax</b>	preprovisioned;
<b>Hierarchy Level</b>	[edit virtual-chassis]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	<p>Enable the preprovisioned configuration mode for a Virtual Chassis configuration.</p> <p>When preprovisioned configuration mode is enabled, you cannot use the CLI or the J-Web interface to change the mastership priority or member ID of member switches.</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Example: Configuring a Virtual Chassis with a Preprovisioned Configuration File</li><li>■ Configuring a Virtual Chassis (CLI Procedure)</li><li>■ Configuring a Virtual Chassis (J-Web Procedure)</li><li>■ Adding a New Switch to an Existing Virtual Chassis Configuration (CLI Procedure)</li><li>■ Replacing a Member Switch of a Virtual Chassis Configuration (CLI Procedure)</li><li>■ Understanding Virtual Chassis Configuration</li></ul>

