

## proxy-mode

---

**Syntax** proxy-mode;

**Hierarchy Level** [edit forwarding-options dhcp-relay overrides],  
[edit forwarding-options dhcp-relay group *group-name* overrides],  
[edit logical-systems *logical-system-name* forwarding-options dhcp-relay overrides],  
[edit logical-systems *logical-system-name* forwarding-options dhcp-relay group *group-name* overrides],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* forwarding-options dhcp-relay overrides],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* forwarding-options dhcp-relay group *group-name* overrides],  
[edit routing-instances *routing-instance-name* forwarding-options dhcp-relay overrides],  
[edit routing-instances *routing-instance-name* forwarding-options dhcp-relay group *group-name* overrides]

**Release Information** Statement introduced in JUNOS Release 9.5.

**Description** Enable DHCP relay proxy mode on the extended DHCP relay. Proxy mode supports all extended DHCP relay functionality.

The extended DHCP relay proxy is not supported for the J-series DHCP server. Also, you cannot configure both the DHCP relay proxy and the extended DHCP local server on the same interface.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Topics**

- DHCP Relay Proxy Overview
- Extended DHCP Relay Agent Overview
- Enabling DHCP Relay Proxy Mode

