

rate

Syntax	<code>rate percentage;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> receive-bucket], [edit interfaces <i>interface-name</i> transmit-bucket]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Specify percentage of the interface line rate that is available to receive or transmit packets.
Options	<i>percentage</i> —Percentage of the interface line rate that is available to receive or transmit packets. Range: 0 through 100
Usage Guidelines	See Configuring Receive and Transmit Leaky Bucket Properties and Configuring Receive and Transmit Leaky Bucket Properties on SONET/SDH Interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

