

revert-time

Syntax	revert-time <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure APS revertive mode.
Default	APS operates in nonrevertive mode.
Options	<i>seconds</i> —Amount of time to wait after the working circuit has again become functional before making the working circuit active again. Range: 1 through 65,535 seconds Default: none (APS operates in nonrevertive mode)
Usage Guidelines	See Configuring SONET/SDH Physical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

