

## routing-instance

---

<b>Syntax</b>	routing-instance { destination <i>routing-instance-name</i> ; bridge-domain <i>name</i> ; }
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel], [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>name</i> ]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	<p>To configure <b>interfaces</b> and <b>logical-systems</b>, specify the destination routing instance that points to the routing table containing the tunnel destination address.</p> <p>To configure <b>protocols</b> for the <b>oam ethernet connectivity-fault-management maintenance-domain</b>, specify the <b>routing-instance</b> <i>name</i>.</p>
<b>Default</b>	The default Internet routing table is <b>inet.0</b> .
<b>Usage Guidelines</b>	<p>See <i>JUNOS Services Interfaces Configuration Guide</i>.</p> <p>See Configuring Maintenance Intermediate Points.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

