

rts

Syntax	rts (assert de-assert normal);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, request to send (RTS).
Options	<p>assert—The to-DCE signal must be asserted.</p> <p>de-assert—The to-DCE signal must be deasserted.</p> <p>normal—Normal RTS signal handling, as defined by the TIA/EIA Standard 530.</p> <p>Default: normal</p>
Usage Guidelines	See Configuring the Serial Signal Handling.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

