

rts-polarity

Syntax	rts-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure RTS signal polarity.
Options	negative—Negative signal polarity. positive—Positive signal polarity. Default: positive
Usage Guidelines	See Configuring Serial Signal Polarities.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

