

source

Syntax	source <i>source-address</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel <i>address</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Specify the source address of the tunnel.
Default	If you do not specify a source address, the tunnel uses the unit's primary address as the source address of the tunnel.
Options	<i>source-address</i> —Address of the local side of the tunnel. This is the address that is placed in the outer IP header's source field.
Usage Guidelines	See the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	multicast-only, [Unresolved xref]

