

## static-tei-val

---

<b>Syntax</b>	<code>static-tei-val value;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim</i> /0/ <i>port</i> isdn-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	For J-series Services Routers only. Statically configure the Terminal Endpoint Identifier (TEI) value. The TEI value represents any ISDN-capable device attached to an ISDN network that is the terminal endpoint. TEIs are used to distinguish between several different devices using the same ISDN links.
<b>Options</b>	<i>value</i> —Value between 0 through 63.
<b>Usage Guidelines</b>	See Configuring ISDN Physical Interface Properties.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

