

transmit-bucket

Syntax transmit-bucket {
 [[Unresolved xref](#)] discard;
 rate *percentage*;
 threshold *bytes*;
 }

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before JUNOS Release 7.4.

Description Set parameters for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.

For each DS3 channel in a channelized OC12 interface, you can configure a unique transmit bucket.

The statements are explained separately.

Usage Guidelines See Configuring Receive and Transmit Leaky Bucket Properties and Configuring Receive and Transmit Leaky Bucket Properties on SONET/SDH Interfaces.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Topics receive-bucket

