

## transmit-clock

---

<b>Syntax</b>	transmit-clock invert;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> serial-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	Configure the transmit clock signal.
<b>Options</b>	invert—Shift the clock phase 180 degrees.
<b>Usage Guidelines</b>	See Configuring the Serial Clocking Mode.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

