

trunk-id

Syntax	<code>trunk-id <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	<p>For ATM2 IQ interfaces with ATM CCC cell-relay encapsulation, configure the trunk identification number.</p> <p>When you associate a trunk ID number with a logical interface, you are in effect specifying the interfaces that are allowed to send ATM traffic over an LSP.</p>
Options	<p><i>number</i>—A valid trunk identifier.</p> <p>Range: For UNI mode, 0 through 7. For NNI mode, 0 through 31.</p>
Usage Guidelines	See Configuring Layer 2 Circuit Transport Mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

