

tth

| | |
|---------------------------------|---|
| Syntax | tth <i>value</i> ; |
| Hierarchy Level | [edit interfaces <i>interface-name</i> unit <i>number</i> tunnel] |
| Release Information | Statement introduced before JUNOS Release 7.4 |
| Description | Set the time-to-live value bit in the header of the outer IP packet. |
| Options | <i>value</i> —Time-to-live value. Range: 0 through 255 Default: 64 |
| Usage Guidelines | See the <i>JUNOS Services Interfaces Configuration Guide</i> . |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |

