

use-interface-description

Syntax	use-interface-description;
Hierarchy Level	<p>[edit ethernet-switching-options secure-access-port vlan (all <i>vlan-name</i>) dhcp-option82 circuit-id]</p> <p>[edit forwarding-options helpers bootp dhcp-option82 circuit-id]</p> <p>[edit forwarding-options helpers bootp interface <i>interface-name</i> dhcp-option82 circuit-id]</p> <p>[edit ethernet-switching-options secure-access-port vlan (all <i>vlan-name</i>) dhcp-option82 remote-id]</p> <p>[edit forwarding-options helpers bootp dhcp-option82 remote-id]</p> <p>[edit forwarding-options helpers bootp interface <i>interface-name</i> dhcp-option82 remote-id]</p>
Release Information	Statement introduced in JUNOS Release 9.3 for EX-series switches.
Description	Use the interface description rather than the interface name (the default) in the circuit ID or remote ID value in the DHCP option 82 information.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Example: Setting Up DHCP Option 82 on an EX-series Switch with No Relay Agent Between Clients and DHCP Server■ Example: Setting Up DHCP Option 82 with an EX-series Switch as Relay Agent Between Clients and a DHCP Server■ Setting Up DHCP Option 82 on the Switch with No Relay Agent Between Clients and DHCP Server (CLI Procedure)■ Setting Up DHCP Option 82 with the Switch as a Relay Agent Between Clients and DHCP Server (CLI Procedure)■ [edit forwarding options] Configuration Statement Hierarchy■ RFC 3046, <i>DHCP Relay Agent Information Option</i>, at http://tools.ietf.org/html/rfc3046.

