

virtual-chassis

Syntax virtual-chassis {
 mac-persistence-timer *seconds*;
 preprovisioned;
 member *member-id* {
 mastership-priority *number*;
 no-management-vlan;
 serial-number;
 role;
 }
 traceoptions {
 file *filename* <files *number*> <size *size*> <world-readable | no-world-readable> <match
 regex>;
 flag *flag* ;
 }
}

Hierarchy Level [edit]

Release Information Statement introduced in JUNOS Release 9.0 for EX-series switches.

Description Configure Virtual Chassis information on an EX 4200 switch.

The statements are explained separately.

Default A standalone EX 4200 switch is a Virtual Chassis by default. It has a default member ID of 0, a default mastership priority of 128, and a default role as master.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

- Related Topics**
- Example: Configuring a Virtual Chassis with a Master and Backup in a Single Wiring Closet
 - Configuring a Virtual Chassis (CLI Procedure)
 - Configuring a Virtual Chassis (J-Web Procedure)
 - Understanding Virtual Chassis Components

