

## vlan-vci-tagging

---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | vlan-vci-tagging;  |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]             |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 9.0.   |
| <b>Description</b>              | Enable the ATM-to-Ethernet interworking cross-connect function on a Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet interface. |
| <b>Usage Guidelines</b>         | See Configuring ATM-to-Ethernet Interworking.  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                      |

