

z0-increment

Syntax	(z0-increment no-z0-increment);
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure an incrementing STM ID rather than a static one.
Usage Guidelines	See Configuring SONET/SDH Physical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	sonet-options

