

Specifying the Interval Between ANCP Adjacency Messages

You can specify the interval between adjacency messages that are sent to all ANCP adjacency peers (neighbors) or to a specific neighbor.

To configure the interval between ANCP adjacency messages for all neighbors:

- Specify the time in seconds.

```
[edit protocols ancp]  
user@host# set adjacency-timer 20
```

To configure the interval between ANCP adjacency messages for a specific neighbor:

- Specify the time in seconds.

```
[edit protocols ancp neighbor 10.2.3.4]  
user@host# set adjacency-timer 20
```

- Related Topics**
- Configuring ANCP
 - Configuring ANCP Neighbors
 - adjacency-timer

