

## Configuring Access to the ANCP Log File

---

By default, log files can be accessed only by the user who configures the tracing operation. You can enable all users to read the log file and you can explicitly set the default behavior of the log file.

To specify that all users can read the log file:

- Configure the log file to be world-readable.

```
[edit protocols ancp traceoptions]  
user@host# set file ancp_1 _logfile_1 world-readable
```

To explicitly set the default behavior, in which the log file can only be read by the user who configured tracing:

- Configure the log file to be no-world-readable.

```
[edit protocols ancp traceoptions]  
user@host# set file ancp_1 _logfile_1 no-world-readable
```

- Related Topics**
- Configuring ANCP
  - traceoptions

