

Configuring the Mobile IP Authentication Method

You can configure Mobile IP to authenticate registration requests from mobile nodes by either the locally configured attributes or a AAA server. AAA server authentication is the default method.



NOTE: AAA server authentication is available only in the default router context. Local authentication is available in both default and nondefault router contexts.

To configure the Mobile IP authentication method:

- Specify either local or AAA authentication.

```
[edit services mobile-ip]
user@host# set authenticate order local
```

- Related Topics**
- [Configuring Mobile IP](#)
 - [authenticate](#)

