

Configuring Mobile IP

You can configure Mobile IP to provide mobility for subscribers in IP networks. The Mobile IP home agent authenticates registration requests from mobile users and forward traffic to them at their care-of address without having to advertise that address to the wider network.

To configure Mobile IP for mobile subscriber access:

1. Configure trace options for troubleshooting the configuration.

See [Tracing Mobile IP Operations](#).

2. Configure the authentication method for registration requests, local or AAA.

See [Configuring the Mobile IP Authentication Method](#).

3. Configure the Mobile IP home agent.

See [Configuring the Mobile IP Home Agent](#).

4. Configure the authentication attributes for the mobile node.

See [Configuring the Local Authentication Attributes for the Mobile Node](#).

5. Configure accounting for Mobile IP subscribers.

See [Configuring Accounting for Mobile IP Subscribers](#).

6. Configure the dynamic reassignment of the mobile node to another home agent.

See [Configuring Dynamic Home Assignment for the Mobile Node](#).

7. Configure the access type for Mobile IP.

See [Configuring the Access Type for Mobile IP](#).

