

Configuring the Time Zone

To configure the time zone on the JCS management module:

1. Log in to the JCS management module.
2. Use the `env` command to set JCS management module 1(mm[1]) as the configuration target. For example:

```
system> env -T mm[1]
```

3. Use the `clock` command to configure the time zone. For example:

```
system:mm[1]> clock -g -8 -dst uc
```

In this example, the clock is configured for 8 hours earlier than UTC (GMT) (`-g -8`), and daylight saving time for the USA and Canada (`-dst uc`) is set.

- Related Topics**
- clock
 - env

