

Configuring an Address-Assignment Pool Name and Network Address

To configure an address-assignment pool, you must specify the name of the pool and configure the addresses for the pool.

To configure an address-assignment pool:

1. Configure the name of the pool and specify the IPv4 protocol.

```
[edit access]
```

```
user@host# edit address-assignment pool isp_1 family inet
```

2. Configure the network address and the prefix length of the addresses in the pool.

```
[edit access address-assignment pool isp_1 family inet]
```

```
user@host# set network 192.168.0.0/16
```

Related Topics ■ [Configuring Address-Assignment Pools Overview](#)

