

Configuring E3 Data Inversion

By default, data inversion is disabled. To enable data inversion at the HDLC level, include the `invert-data` statement at the `[edit interfaces interface-name e3-options]` hierarchy level:

```
[edit interfaces interface-name e3-options]  
invert-data;
```

When you enable data inversion, unused data bits in the data stream are transmitted inverted; that is, zeroes are transmitted as ones and ones as zeroes. Enable inversion to be compatible with another vendor's E3 interface.

