

Configuring T1 Start and End Flags

By default, a T1 interface shares the transmission of the start and end flags.

To configure a T1 interface to wait two idle cycles between the start and end flags, include the **start-end-flag** statement with the **filler** option at the **[edit interfaces *interface-name* t1-options]** hierarchy level:

```
[edit interfaces interface-name t1-options]  
start-end-flag filler;
```

To revert to the default behavior, sharing the transmission of start and end flags, include the **start-end-flag** statement with the **shared** option at the **[edit interfaces *interface-name* t1-options]** hierarchy level:

```
[edit interfaces interface-name t1-options]  
start-end-flag shared;
```

