

Configuring T3 Start and End Flags

By default, a T3 interface shares the transmission of the start and end flags.

To configure a T3 interface to wait two idle cycles between the start and end flags, include the **start-end-flag** statement with the **filler** option at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]  
start-end-flag filler;
```

To revert to the default behavior, sharing the transmission of start and end flags, include the **start-end-flag** statement with the **shared** option at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]  
start-end-flag shared;
```

