

## Configuring the T1 Idle Cycle Flag

---

By default, a T1 interface transmits the value 0x7E in the idle cycles. To have the interface transmit the value 0xFF (all ones) instead, include the **idle-cycle-flag** statement at the [edit interfaces *interface-name* t1-options] hierarchy level, specifying the **ones** option:

```
[edit interfaces interface-name t1-options]  
idle-cycle-flag ones;
```

To explicitly configure the default value of 0x7E, include the **idle-cycle-flag** statement with the **flags** option:

```
[edit interfaces interface-name t1-options]  
idle-cycle-flag flags;
```

