

Disabling the Sending of PPPoE Keepalive Messages

When configuring the client, you can disable the sending of keepalive messages on a logical interface by including the `no-keepalives` statement:

```
no-keepalives;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces pp0.0]
- [edit logical-systems *logical-system-name* interfaces pp0 unit *logical-unit-number*]

