

Enabling or Disabling SNMP Notifications on Physical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. To explicitly enable these notifications on the physical interface, include the **traps** statement at the **[edit interfaces *interface-name*]** hierarchy level. To disable these notifications on the physical interface, include the **no-traps** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
(traps | no-traps);
```



NOTE: Gigabit Ethernet interfaces on J-series Services Routers do not support SNMP.
