

Example: Minimum DHCP Relay Agent Configuration

This example shows the minimum configuration you need to use the extended DHCP relay agent on the router:

```
[edit forwarding-options]
dhcp-relay {
  server-group {
    test 10.0.2.1;
  }
  active-server-group test;
  group all {
    interface fe-0/0/2.0;
  }
}
```

This example creates a server group and an active server group named **test** with IP address 10.0.2.1. The DHCP relay agent configuration is applied to a group named **all**. Within this group, the DHCP relay agent is enabled on interface fe-0/0/2.0.

Related Topics ■ [Extended DHCP Relay Agent Overview](#)

Published: 2009-07-16