

show arp inspection statistics

Syntax	show arp inspection statistics
Release Information	Command introduced in JUNOS Release 9.0 for EX Series switches.
Description	Display ARP inspection statistics.
Required Privilege Level	view
Related Topics	<ul style="list-style-type: none">■ clear arp inspection statistics■ Example: Configuring Port Security, with DHCP Snooping, DAI, MAC Limiting, and MAC Move Limiting, on an EX Series Switch■ Verifying That DAI Is Working Correctly
List of Sample Output	show arp inspection statistics on page 1
Output Fields	Table 1 lists the output fields for the show arp inspection statistics command. Output fields are listed in the approximate order in which they appear.

Table 1: show arp inspection statistics Output Fields

Field Name	Field Description	Level of Output
Interface	Interface on which ARP inspection has been applied.	All levels
Packets received	Total number of packets total that underwent ARP inspection.	All levels
ARP inspection pass	Total number of packets that passed ARP inspection.	All levels
ARP inspection failed	Total number of packets that failed ARP inspection.	All levels

```
show arp inspection statistics  user@switch> show arp inspection statistics
show arp inspection statistics
Interface      Packets received  ARP inspection pass  ARP inspection failed
-----
ge-0/0/0      0                 0                    0
ge-0/0/1      0                 0                    0
ge-0/0/2      0                 0                    0
ge-0/0/3      0                 0                    0
ge-0/0/4      0                 0                    0
ge-0/0/5      0                 0                    0
ge-0/0/6      0                 0                    0
ge-0/0/7      703               701                  2
```

Published: 2009-07-23