

show redundant-trunk-group

Syntax	show redundant-trunk-group <group-name <i>group-name</i> >
Release Information	Command introduced in JUNOS Release 9.0 for EX Series switches.
Description	Display information about redundant trunk groups.
Options	group-name <i>group-name</i> —Display information about the specified redundant trunk group.
Required Privilege Level	view
Related Topics	<ul style="list-style-type: none">■ Example: Configuring Redundant Trunk Links for Faster Recovery■ Understanding Redundant Trunk Links on EX Series Switches
List of Sample Output	show redundant-trunk-group group-name Group1 on page 1
Output Fields	Table 1 lists the output fields for the show redundant-trunk-group command. Output fields are listed in the approximate order in which they appear.

Table 1: show redundant-trunk-group Output Fields

Field Name	Field Description
Group Name	Name of the redundant trunk port group.
Interface	Name of an interface belonging to the trunk port group. <ul style="list-style-type: none">■ (P) denotes a primary interface.■ (A) denotes an active interface.■ Lack of (A) denotes a blocking interface.
State	Operating state of the interface: UP or DOWN.
Last Time of Flap	Date and time at which the advertised link became unavailable, and then, available again.
# Flaps	Total number of flaps since the last switch reboot.

```
show
redundant-trunk-group
group-name Group1
user@switch> show redundant-trunk-group group-name Group1
show redundant-trunk-group group-name Group1
Group Name Interface State Last Time of Flap # Flaps
Group1 ge-0/0/45.0 (P) UP Fri Jan 2 04:10:58 0
ge-0/0/47.0 UP Fri Jan 2 04:10:58 0
```