

show spanning-tree statistics

Syntax	show spanning-tree statistics interface <i>interface-name</i> <brief detail>
Release Information	Command introduced in JUNOS Release 9.0 for EX Series switches.
Description	Display STP statistics.
Options	none—Display brief STP statistics. brief detail—(Optional) Display the specified level of output.
Required Privilege Level	view
Related Topics	<ul style="list-style-type: none">■ show spanning-tree bridge■ Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches■ Understanding STP for EX Series Switches■ Understanding RSTP for EX Series Switches■ Understanding MSTP for EX Series Switches■ Understanding VSTP for EX Series Switches
List of Sample Output	show spanning-tree statistics interface on page 2
Output Fields	Table 1 lists the output fields for the <code>show spanning-tree statistics</code> command. Output fields are listed in the approximate order in which they appear.

Table 1: show spanning-tree statistics Output Fields

Field Name	Field Description
BPDUs sent	Total number of BPDUs sent.
BPDUs received	Total number of BPDUs received.
Interface	Interface for which the statistics are being displayed.
Next BPDU transmission	Number of seconds until the next BPDU is scheduled to be sent.

```
show spanning-tree user@switch> show spanning-tree statistics interface ge-0/0/4  
statistics interface Interface  BPDUs sent  BPDUs received  Next BPDU  
                        transmission  
ge-0/0/4              7    190    0
```

Published: 2009-07-28