

arp-inspection

Syntax (arp-inspection | no-arp-inspection);

Hierarchy Level [edit ethernet-switching-options secure-access-port vlan (all | *vlan-name*)]

Release Information Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Perform dynamic ARP inspection on all VLANs or on the specified VLAN.

- arp-inspection—Enable ARP inspection.



NOTE: When ARP inspection is enabled, the switch logs ARP request packets that it rejects.

-
- no-arp-inspection—Disable ARP inspection.

Default Disabled.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

- Related Topics**
- Example: Configuring Port Security, with DHCP Snooping, DAI, MAC Limiting, and MAC Move Limiting, on an EX Series Switch
 - Example: Configuring DHCP Snooping, DAI, and MAC Limiting on an EX Series Switch with Access to a DHCP Server Through a Second Switch
 - Example: Configuring DHCP Snooping and DAI to Protect the Switch from ARP Spoofing Attacks
 - Enabling Dynamic ARP Inspection (CLI Procedure)
 - Enabling Dynamic ARP Inspection (J-Web Procedure)

Published: 2009-07-23