

## auto-negotiation

---

<b>Syntax</b>	(auto-negotiation   no-auto-negotiation);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX Series switches.
<b>Description</b>	Explicitly enable or disable autonegotiation. <ul style="list-style-type: none"><li>■ <b>auto-negotiation</b>—Enable autonegotiation.</li><li>■ <b>no-auto-negotiation</b>—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure link mode and speed options.</li></ul>
<b>Default</b>	Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Configuring Gigabit Ethernet Interfaces (CLI Procedure)</li><li>■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)</li><li>■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at <a href="http://www.juniper.net/techpubs/software/junos/junos95/index.html">http://www.juniper.net/techpubs/software/junos/junos95/index.html</a></li></ul>

---

Published: 2009-07-22