

boot-file

Syntax	boot-file <i>filename</i> ;
Hierarchy Level	[edit access address-assignment pool <i>pool-name</i> family inet dhcp-attributes]
Release Information	Statement introduced in JUNOS Release 9.0.
Description	Set the boot file advertised to DHCP clients. After the client receives an IP address and the boot file location from the DHCP server, the client uses the boot image stored in the boot file to complete DHCP setup. This is equivalent to DHCP option 67.
Options	<i>filename</i> —The location of the boot file on the boot server. The filename can include a pathname.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring Address-Assignment Pools Overview■ boot-server

Published: 2009-07-16