

boot-server

Syntax	boot-server (<i>address</i> <i>hostname</i>);
Hierarchy Level	[edit access address-assignment pool <i>pool-name</i> family inet dhcp-attributes]
Release Information	Statement introduced in JUNOS Release 9.0.
Description	Configure the name of the boot server advertised to DHCP clients. The client uses a boot file located on the boot server to complete DHCP setup. This is equivalent to DHCP option 66.
Options	<ul style="list-style-type: none">■ <i>address</i>—The IPv4 address of a boot server.■ <i>hostname</i>—The fully qualified hostname of a boot server.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring Address-Assignment Pools Overview■ boot-file

Published: 2009-07-16