

## circuit-type

---

<b>Syntax</b>	circuit-type;
<b>Hierarchy Level</b>	[edit forwarding-options dhcp-relay authentication username-include], [edit forwarding-options dhcp-relay group <i>group-name</i> authentication username-include], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay authentication username-include], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i> authentication username-include], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay authentication username-include], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> authentication username-include], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay authentication username-include], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> authentication username-include]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.1.
<b>Description</b>	Specify that the circuit type is concatenated with the username during the subscriber authentication process.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	■ Using External AAA Authentication Services with DHCP

---

Published: 2009-07-16