

## description

---

<b>Syntax</b>	<code>description text;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>ge-chassis/slot/port</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX Series switches.
<b>Description</b>	Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the show interfaces commands, and is also exposed in the <b>ifAlias</b> Management Information Base (MIB) object. It has no effect on the operation of the interface or the switch.
<b>Default</b>	No textual description is configured
<b>Options</b>	<i>text</i> —Text to describe the interface. If the text includes spaces, enclose the entire text in straight quotation marks.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Configuring Gigabit Ethernet Interfaces (CLI Procedure)</li><li>■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)</li><li>■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at <a href="http://www.juniper.net/techpubs/software/junos/junos95/index.html">http://www.juniper.net/techpubs/software/junos/junos95/index.html</a></li></ul>

---

Published: 2009-07-22