

## disable

---

<b>Syntax</b>	disable;
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface (all   [ <i>interface-names</i> ])]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX Series switches.
<b>Description</b>	Disable 802.1X authentication on a specified interface or all interfaces.
<b>Default</b>	802.1X authentication is disabled on all interfaces.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ show dot1x</li><li>■ Example: Setting Up 802.1X for Single Supplicant or Multiple Supplicant Configurations on an EX Series Switch</li><li>■ Example: Setting Up 802.1X in Conference Rooms to Provide Internet Access to Corporate Visitors on an EX Series Switch</li><li>■ Example: Setting Up VoIP with 802.1X and LLDP-MED on an EX Series Switch</li><li>■ Example: Configuring Static MAC Bypass of Authentication on an EX Series Switch</li><li>■ Configuring 802.1X Interface Settings (CLI Procedure)</li><li>■ Configuring 802.1X Authentication (J-Web Procedure)</li></ul>

---

Published: 2009-08-05