

## disable

---

**Syntax**    disable;

**Hierarchy Level**    [edit protocols gvrp],  
[edit protocols gvrp interface *[interface-name]*]

**Release Information**    Statement introduced in JUNOS Release 9.0 for EX Series switches.



**NOTE:** As of JUNOS Release 9.2, GVRP can be enabled only on trunk interfaces.

---

**Description**    Disable the GVRP configuration on the interface.

**Default**    If you do not configure GVRP, it is disabled. You can use this command to disable a prior configuration of GVRP on a specified interface.

**Required Privilege Level**    routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Topics**    ■    show gvrp  
                         ■    Example: Configure Automatic VLAN Administration Using GVRP

---

Published: 2009-07-22