

disable-timeout

Syntax disable-timeout *timeout*;

Hierarchy Level [edit ethernet-switching-options port-error-disable]

Release Information Statement introduced in JUNOS Release 9.6 for EX Series switches.

Description Specify how long the Ethernet switching interfaces remain in a disabled state due to MAC limiting, MAC move limiting, or storm control errors.



NOTE: If you modify the timeout value of an existing disable timeout, the new timeout value does not impact the timing of restoration to service of currently disabled interfaces that have been configured for automatic recovery. The new timeout value is applied only during the next occurrence of a port error.

You can bring up the currently disabled interfaces by running the **clear ethernet-switching port-error** command.

Default The disable timeout is not enabled.

Options *timeout*—Time, in seconds, that the disabled state remains in effect. The disabled interface is automatically restored to service when the specified timeout value is reached.
Range: 10 through 3600 seconds

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics ■ Example: Configuring Storm Control to Prevent Network Outages on EX Series Switches
■ Configuring Autorecovery From the Disabled State on Secure or Storm Control Interfaces (CLI Procedure)

Published: 2009-07-23