

ether-type

Syntax	ether-type (0x8100 0x88a8 0x9100)
Hierarchy Level	[edit ethernet-switching-options dot1q-tunneling]
Release Information	Statement introduced in JUNOS Release 9.3 for EX Series switches.
Description	Configure a global value for the Ethertype. Only one Ethertype value is supported at a time. The Ethertype value appears in the Ethernet type field of the packet. It specifies the protocol being transported in the Ethernet frame.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ dot1q-tunneling■ Example: Setting Up Q-in-Q Tunneling on EX Series Switches■ Configuring Q-in-Q Tunneling (CLI Procedure)

Published: 2009-07-22