

## ethernet-port-type-virtual

---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | ethernet-port-type-virtual;  |
| <b>Hierarchy Level</b>          | [edit access profile <i>profile-name</i> radius options]   |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 9.1.   |
| <b>Description</b>              | Specify the physical port type the router uses to authenticate clients. The port type is passed in RADIUS attribute 61 (NAS-Port-Type). This statement specifies a port type of <b>virtual</b> ; by default the router passes a port type of <b>ethernet</b> in RADIUS attribute 61. |
| <b>Required Privilege Level</b> | admin—To view this statement in the configuration.<br>admin-control—To add this statement to the configuration.  |
| <b>Related Topics</b>           | ■ Configuring RADIUS Server Parameters for Subscriber Access   |

---

Published: 2009-07-16